outdoor interiors.

bringing style and solutions to your patio & garden

STOP! PLEASE READ FIRST:


Thank you for purchasing this item from Outdoor Interiors. Please verify all the hardware and components are included as you unpack the carton. Place the items in a safe area to avoid loss and damaging contents. Use a soft area or the empty box to assemble the item.


ASSEMBLY TIPS: Assemble on its side while following pictured instructions. Never over-tighten any screws or bolts. It 's best to assemble with 2 people. Never fully tighten any bolt/screw until all inserted on each side. Then tighten.

Please visit our website's contact us page if you have any questions www.outdoorinteriors.com

Please review the "PLEASE OIL ME" card for how to care & maintain your new furniture.


Components List:







ASSEMBLY INSTRUCTIONS FOR S80022 MODERN CAPTAINS CHAIRS

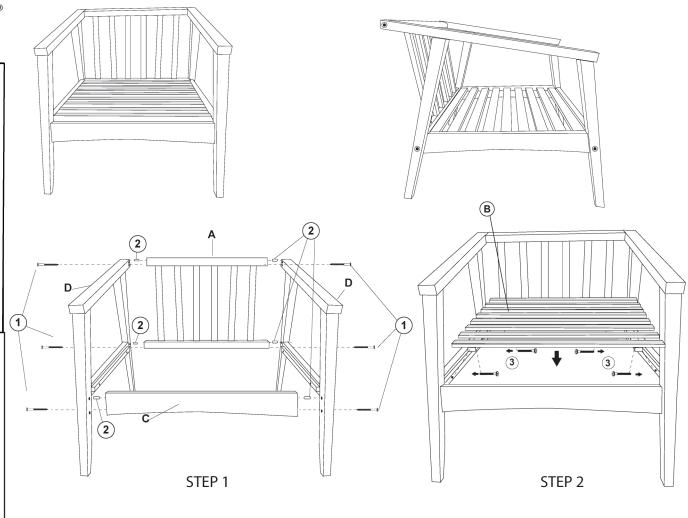



1. SCREW 7*90

2. WOODEN DOWEL X 6



6 PCS



6 PCS

3. SCREW 7*40



ALLEN KEY A4



PORTABLE DRILL BIT

1 PC

outdoorinteriors

bringing style and solutions to your patio & garden

STOP! PLEASE READ FIRST:

Thank you for purchasing this item from Outdoor Interiors. Please verify all the hardware and components are included as you unpack the carton. Place the items in a safe area to avoid loss and damaging contents. Use a soft area or the empty box to assemble the item.

ASSEMBLY TIPS: Assemble on its side while following pictured instructions. Never over-tighten any screws or bolts. It 's best to assemble with 2 people. Never fully tighten any bolt/screw until all inserted on each side. Then tighten.

Please visit our website's contact us page if you have any questions www.outdoorinteriors.com

Please review the "PLEASE OIL ME" card for how to care & maintain your new furniture.

В

D

2. WOODEN DOWEL X 6

6 PCS

Components List:

Back x1

X1

LIST OF HARDWARE:

6 PCS

1. SCREW 7*90

ASSEMBLY INSTRUCTIONS FOR S80044

